


Recordable Paper Album Kits

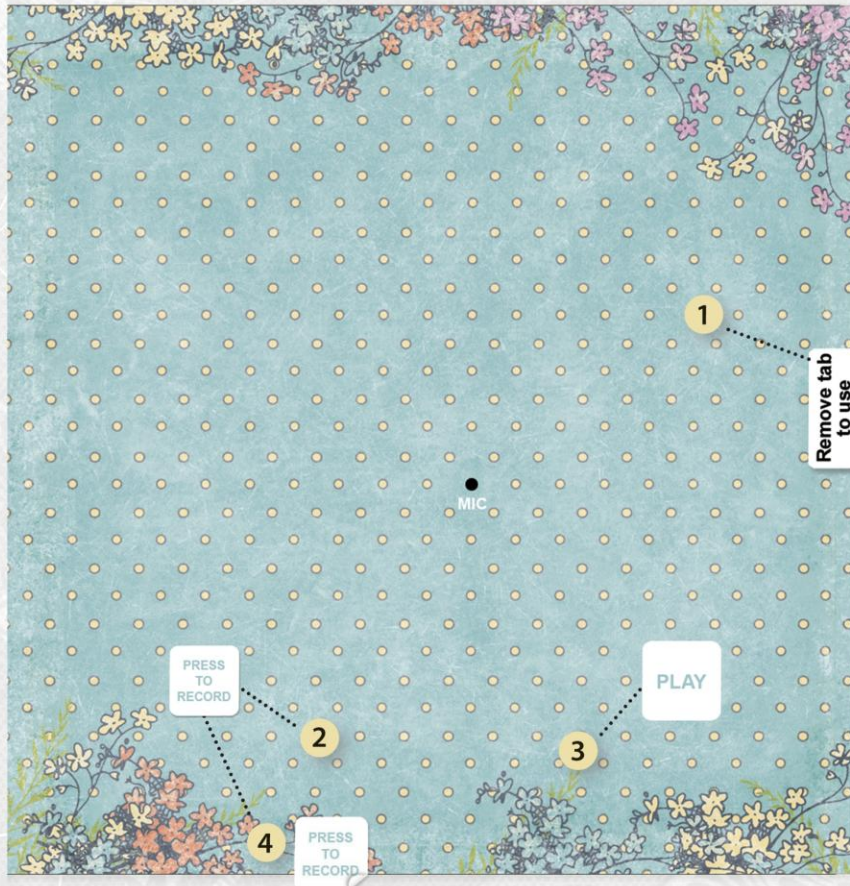

Recording instructions:

Batteries are non replaceable. To promote the longest battery life, save the recording for last.

- 1) Remove tab to activate battery.
- 2) Push “press to record” button once and after the beep, speak into the mic to record your 20-second message. Once finished, push button again to stop recording which is signified by two beeps.
- 3) Press “play” to listen to your message. To re-record, repeat step two.
- 4) To make your message final, remove the “press to record” sticker. Please note, you will not be able to re-record after this sticker has been removed.

Note: To avoid background noise, record your message in a quiet area.